

Electrical Goods, Electronic Devices

400723 Schermaschine FarmClipper 4

Info data sheet for electrical items.
Please refer to the description accompanying the article.

Product: Electrical Goods, Electronic Devices

Usage: These products are used to perform various electrical functions in the home, home, or commercial field.

Materials:

Housing: Plastic, Metal

Electrical components: copper, aluminum, printed circuit boards, cables

Dangers:

Electrical hazard: Risk of electric shock if used improperly or damaged.

Fire hazard: Electrical components can overheat and cause fires.

Mechanical hazard: Improper handling can lead to injuries.

Chemical hazard: Some components may contain hazardous chemicals that can be harmful if disposed of improperly.

Safety Measures:

Handling: Use the electrical items according to the manufacturer's instructions. Always switch off appliances and disconnect them from the mains before maintenance.

Inspection: Regularly inspect electrical items for wear and tear or damage, and have defective parts repaired or replaced immediately by a professional.

Storage: Store products in a dry, cool place, away from direct sunlight and extreme temperatures.

Cleaning: Use only cleaning products and methods recommended by the manufacturer for cleaning.

First aid measures:

Electric shock: Unplug the device immediately and seek medical help.

Fire: Use suitable extinguishing agents such as a CO2 fire extinguisher. In an emergency, call the fire department.

Skin contact: In case of contact with dangerous chemicals, clean the affected area thoroughly with soap and water and consult a doctor if symptoms persist.

Ingestion: If small parts are swallowed, consult a doctor immediately.

Albert Kerbl GmbH

Felizenzell 9
DE 84428 Buchbach
+49-8086-933-100
info@kerbl.com